



Paper needle

marker 9 · black square 40 mm · held from behind · tip 53.3 mm below the marker centre · print at 100 % on card

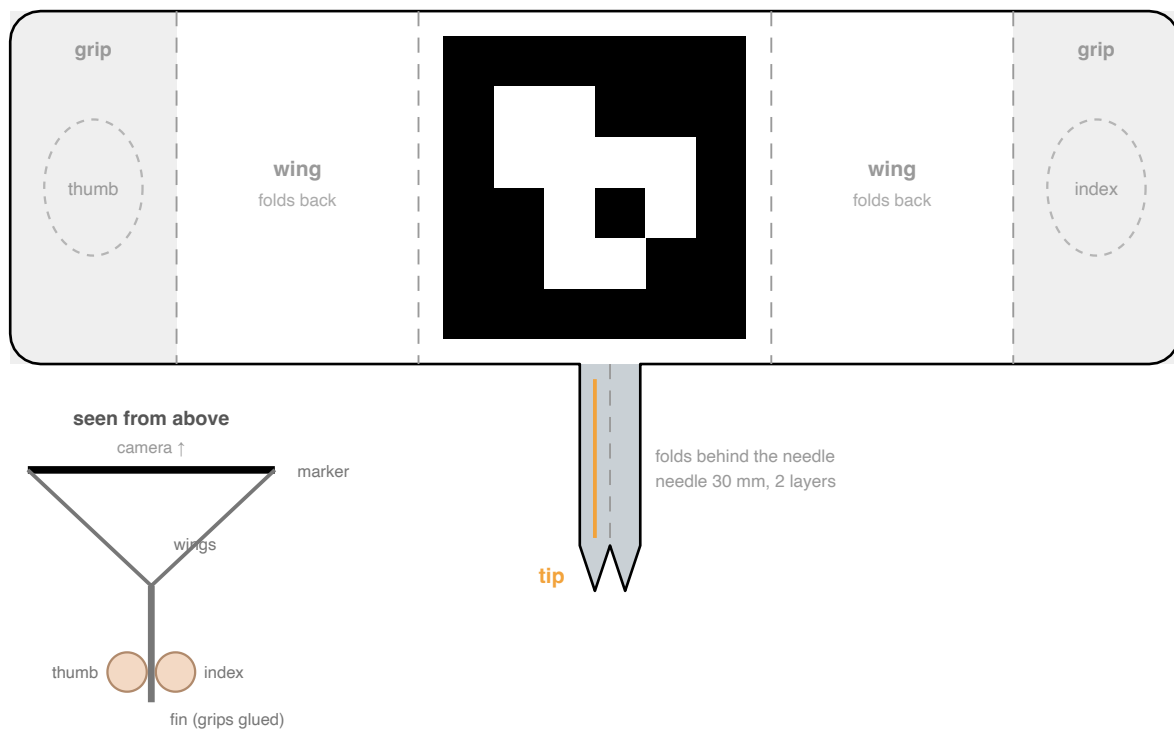

PRINT SCALE CHECK



bar = exactly 50 mm, black square 40.0 mm
if not: reprint at 100 % (no fit-to-page)

LEGEND

— cut
- - - score + fold

1 PRINT

This sheet at 100 % on white card, 200–250 g/m². Check the 50 mm bar.

2 CUT

Cut the solid outline — everything stays one piece, the needle too. Do not cut the dashed lines.

3 FOLD

Score all dashed lines. Fold both wings back at the marker's edges, then the grips at the next line, so they meet flat behind the marker: a triangle with a fin (see "seen from above").

4 GLUE

Glue the two grips together, blank sides facing. Fold the needle's second layer behind it and glue it flat (glue stick, whole surface).

5 HOLD

Pinch the fin from behind between thumb and index finger. The marker faces the camera, nothing covers it; the needle points away from your hand.

6 USE

In the app: NEEDLE (N), marker size 40 mm. Hold it in the hand that is not holding the probe.